

MEF ADJUSTMENT

1- Loosen the lock screw by 1.3mm hexagon wrench. Keep hexagon wrench inserted.

2- From the view of R&P, by using the hexagon wrench, turn on clockwise the blocking bearings unit (A) to tighten the MEF.

3- Tighten the lock screw.

